

“SQA” TECHNICAL CHARACTERISTICS AND DATA

DESCRIPTION

Forclima “SQA” air quality sensor allows the control of the Heat Exchanger units in order to maintain a pre-set air quality level in the environment.

The SQA can NOT be used to reveal fuel gas presence or as fire-proof alarm.

DIMENSIONS

H 84 x L 130 x P 43 mm.

INSTALLATION

Please install **SQA** in a place far from direct heat source and far from direct air flows.

Install the SQA on the wall, at 1,5 m high from the ground.

OPERATION


The sensor assures the automatic start of the fans when smoke, gas or odour concentration exceeds the set value. This air quality level can be set moving the knob on the “**SQA**” sensor.

Once the desired level is reached, the **SQA** cuts off the unit operation.

This interruption, besides, can be delay through the “t” wheel, placed down the control on the right.

GUARANTEE

24 months.

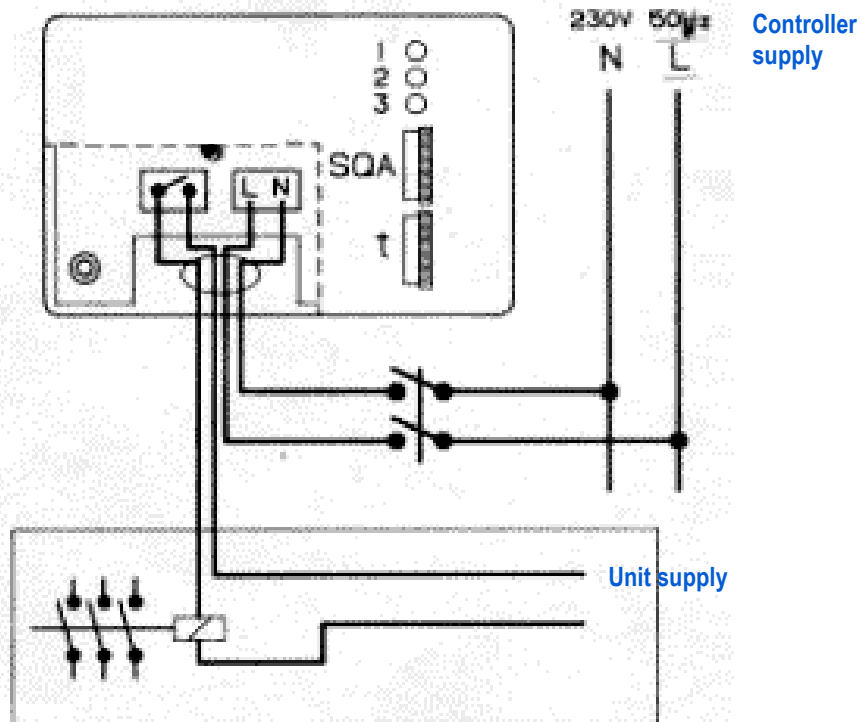

L = phase; N = common

The contact opens when the air quality level drops below the pre-set level

NOTE: Please respect the polarities



Vicolo Sanzio, 3 (Statale 16)
35020 Albignasego (PD) Italy
tel. +39 049 680475
fax +39 049 680077
info@forclima.it
www.forclima.it

FORCLIMA
Heat Recovery Ventilation